

Digital Photo Album

User's Manual

>>Please read this manual before operating<<

Read First

Please read all the safety and operating instructions before operating the Album.
And please follow all warnings placed on the Album or in the user's manual for future reference.

System Requirements

System Requirements: Windows 2000/XP/Vista

Package Includes

 


Important Safety Instructions

WARNING:



Description of the Digital Photo Album

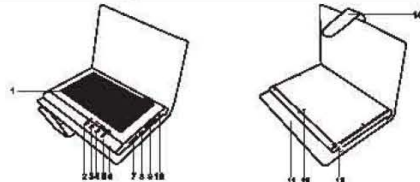


1. LCD screen
2. EXIT Button: get out of current mode and move to menu.
3. SLIDESHOW/ENTER Button:
ENTER: play photo or confirm selection
SLIDESHOW: start or stop the slide show as well as to select the slide show duration
4. PREVIOUS/16:9/4:3 Button:
1) Short press the button to view the previous photo
2) Long press the button to switch between 16:9 and 4:3 display format.

5. NEXT/AUTO ZOOM Button:
1) Short press the button to view the next photo.
2) Long press the button to switch between Original and Auto Zoom display format.
6. Power on/off Indicating LED
7. POWER ON/OFF
8. USB Host Slot
9. SD/MMC/MS/xD Slot
10. DC power Input
11. Walllet
12. Hole for the stand
13. Rod stand

Placing the Photo Album


The Photo Album can be placed on the desktop using the Included stand.

 1. Separate the main unit from the cover.
2. Take out the rod stand located in the back of the main unit.
3. Screw in the rod into the screw hole.
4. Place the Photo Album horizontally.



Using Card Reader

1. Insert the memory card into the slot of the Album, make sure that the metal contacts of SD/MMC/MS/xD memory card is facing the front of the Album.
2. To remove, simply pull out the card.

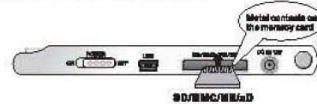


Note:

If you use Memory Stick Pro, a Memory Stick Pro-to-Memory Stick adaptor must be used otherwise the card may be stuck inside the slot.

Connection to PC

You need a Mini USB-to-USB (male) adaptor cable to connect the Mini USB port of the Album to the standard USB port of your PC.

Note: When connected, you can transfer files among PC, memory cards and internal memory.

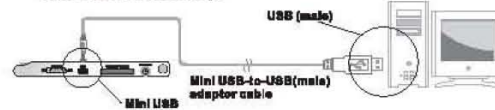

Using the AC Adaptor

This Album can be powered by AC through the supplied switching power AC adaptor. Connect the AC adaptor to the Album as illustrated below.



Note

- Always turn off the Album before connecting or disconnecting the AC cord.
- Only use the AC adaptor supplied with this Album. Using a different type of adaptor may cause malfunction or damage to the product.
- When the AC adaptor is used for prolonged period of time, the adaptor may heat up, this is normal and is not a cause for concern.
- When not using the adaptor, unplug it from the outlet.

Charging the battery

1. Use the AC adaptor to charge the battery. Make the connection as illustrated below.
2. Slide POWER to OFF. (The Album must be turned off to charge the battery).
3. The charging starts, and when it is fully charged, the charging stops automatically.

LED Indicator

1. During charging, the red and green LEDs blink alternatively.
2. When the battery is fully charged, the green LED stays lit.
3. When the Album uses battery for power, steady green LED lights.

If the battery power is low, the green LED blinks.

Viewing Photos

1. Slide POWER ON/OFF to the "ON" position, the power indicator illuminates, and the Album starts the slide show automatically.
2. Insert your memory card into SD/MMC/MS/xD, press EXIT to display the memory devices.
3. Use the PREVIOUS or NEXT to select the 4 in 1 card or internal memory.



Note:

1. The Album reads 4-in-1 card first before reading the internal memory.
2. If no file is stored in the device, the Album displays "No file found".

Three Viewing Modes

You can view photos in three ways: Browse, Thumbnail and Slide show.



Browse Photos

Method 1:

In Slide show mode, repeatedly press SLIDE SHOW to select "slide show off" to stop the slide show and enter browse mode, use NEXT to browse the next photo and PREVIOUS to browse the previous photo.

Method 2:

In Thumbnail mode, select the photo and press ENTER, use PREVIOUS and NEXT to browse photos.

View Thumbnail

If the Album is playing photos either in Browse or Slide show mode, simply press EXIT to enter Thumbnail mode.

View Slide show

Press SLID SHOW to start the slide show, repeatedly press SLID SHOW to select the duration of each photo (3Sec, 5Sec, 10Sec, 15Sec, 30Sec, 1Min, 15Min, 1Hour, 1Day). To stop the slide show, repeatedly press SLIDE SHOW to select "slide show off".

Change Display Format

Long press PREVIOUS/16:9/4:3 to switch between 16:9 and 4:3 display format.
Long press NEXT/AUTO ZOOM to switch between original and auto-zoom format.

Troubleshooting

Symptom	Check
No display	1. Run out of battery 2. Check Power switch is at ON position.
No photos display while memory card or USB stick has been inserted.	1. Remove and insert memory card or USB and make sure they are properly inserted in place. 2. Make sure the image files are in correct format JPG. Note: You may use Microsoft Paint program to display the wrong-format image and save the image as standard JPEG before displaying on this Album.

Specifications

Display	800(H)X480(V)
Internal Flash Memory	1GB(Byte)
Readable memory	SD, MMC, MS, xD card
Readable file	JPG
Operating Temperature Range	0°C ~ 45°C
AC Adaptor	DC12V, 1.25A
Weight	450g
Dimensions	208mm (W) x 153mm (D) x 31mm (H)

■ Specifications are subject to change without notice. All efforts have been made to ensure accuracy, the manufacturer will not be held liable for any inaccuracies or errors.